

Ferrule Data Chart for Bel-Stewart Ferrule Hand Tool

Cable Dia. ±.005	Ferrule Part Number	Hand Tool Part Number	Ferrule Crimp Inserts		Locator Plate Part Number	Complete Ass'y. Part Number	
			Stationary Insert p/n	Ram Insert p/n			
.125	F-210-205	2940211-01	2912515-01	2912516-01	2912517-01	2912501-01	
.135					2912518-01	2912502-01	
.145					2912519-01	2912503-01	
.155					2912522-01	2912504-01	
.165					2912520-01	2912521-01	2912523-01
.175	2912524-01		2912506-01				
.185	F-235-205-L		2912525-01	2912526-01	2912527-01	2912507-01	
.195					2912528-01	2912508-01	
.205					2912529-01	2912509-01	
.215					2912530-01	2912531-01	2912532-01
.225		2912533-01					2912511-01
.235	F-270-205	2912535-01	2912536-01	2912537-01	2912513-01		
.245				2912538-01	2912514-01		
.255				2912535-01	2912536-01	2912540-01*	2912539-01
.265	F-300-275	2912582-01	2912583-01	2912584-01	2912585-01		



NOTE:

1. If cable diameter falls in between sizes shown, round up to next .005 increment.
2. (*) at part #2912540-01 = 4mm hex nut; no Locator Plate needed.

Bel-Stewart Connector Ferrule Hand Tool Instructions

P/N 2940211-01

Manual #290005 - Rev. A2

Bel-Stewart Connector
11118 Susquehanna Trail South
Glen Rock, PA 17327-9199
(717) 235-7512

ASSEMBLY INSTRUCTIONS

Stationary
Crimp Insert
29125xx-01
(See chart on
back page)



Locator Plate
29125xx-01
(See chart on
back page)



Ram
Insert
29125xx-01
(See chart on
back page)



1



2



3



4



5

1. Position "Stationary Crimp Insert" as shown.
2. Install "Insert" with screw. Use 2.5mm Allen wrench.
3. Position "Ram Crimp Insert" as shown.
4. Place "Insert" on hand tool label side & position "Locator Plate" on opposite side.
5. Install "Insert" & "Plate" with screw. Use 2.5mm Allen wrench.



A

B

This tool incorporates an eccentric axle and an adjustment wheel to adjust and re-calibrate to ensure correct crimp performance.

Should adjustment be necessary, the following procedure should be followed:

1. Loosen and remove the Combination Head screw (A).
2. Using a screw driver, turn the numbered adjustment wheel to the next higher/lower number (B).
3. Re-install the Combination Head Screw and tighten.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Bel:](#)

[2912511-01](#) [2912510-01](#) [2912508-01](#) [2912526-01](#) [2912532-01](#) [2912523-01](#) [2912539-01](#) [2912512-01](#) [2912530-01](#) [2912515-01](#) [2912516-01](#) [2912509-01](#)