Senseair

Installation manual

Sunrise & Sunlight evaluation kit

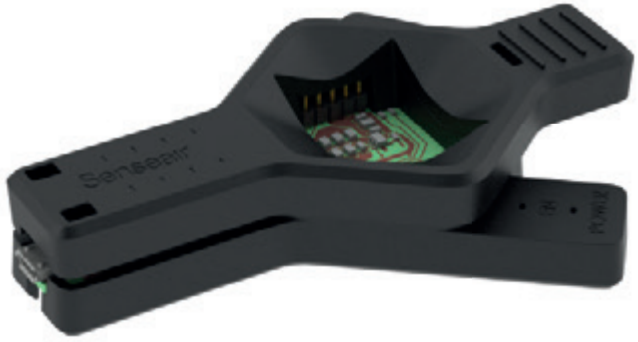

x1

x1

NOTE:
ESD sensitive product.
Use ESD protection equipment.

1

a

b

2
b
a
Sensebox
EN
POWER

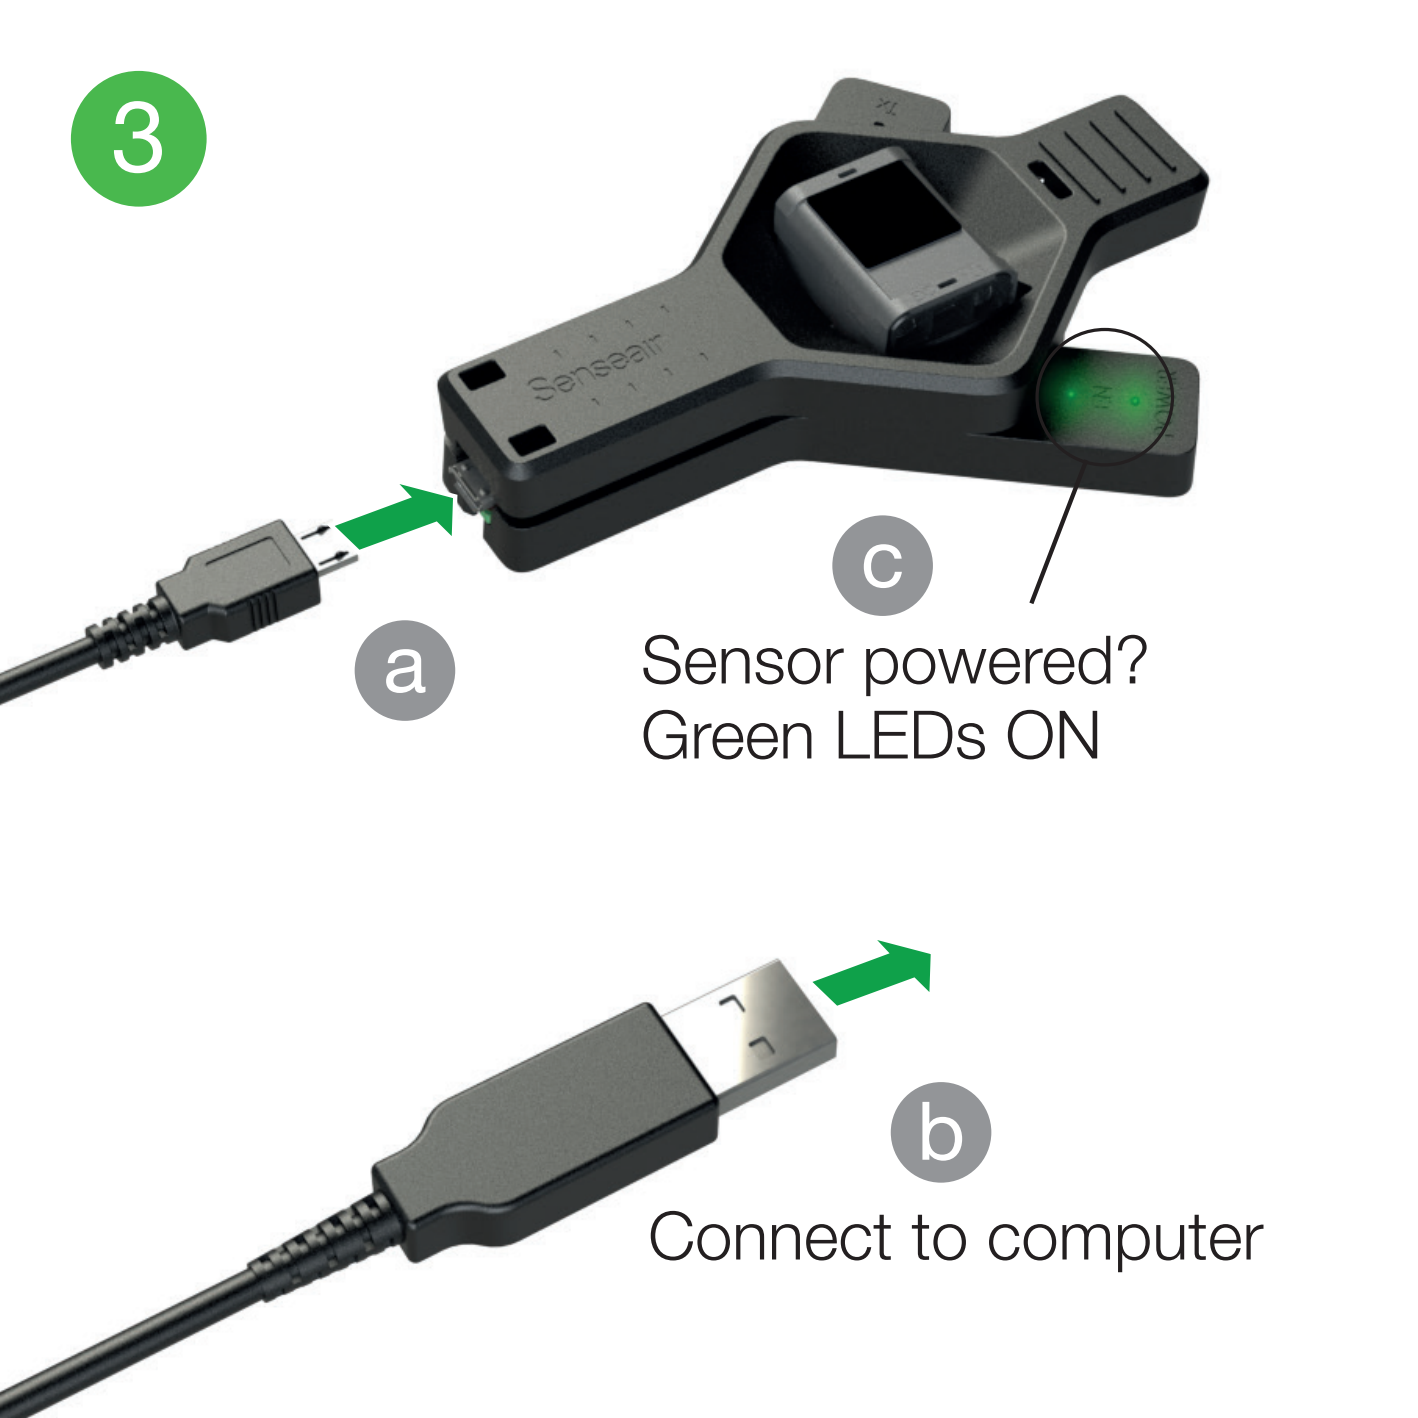
3
Senseair
a
c
Sensor powered?
Green LEDs ON
b
Connect to computer

4

Download software &
USB Com Cable Driver:

https://senseair.com/product/
sunrise-sunlight-evaluation-kit/

5

Sensor connected?
Yellow LEDs, Rx/Tx,
flashes alternately

IMA8637 Rev 5

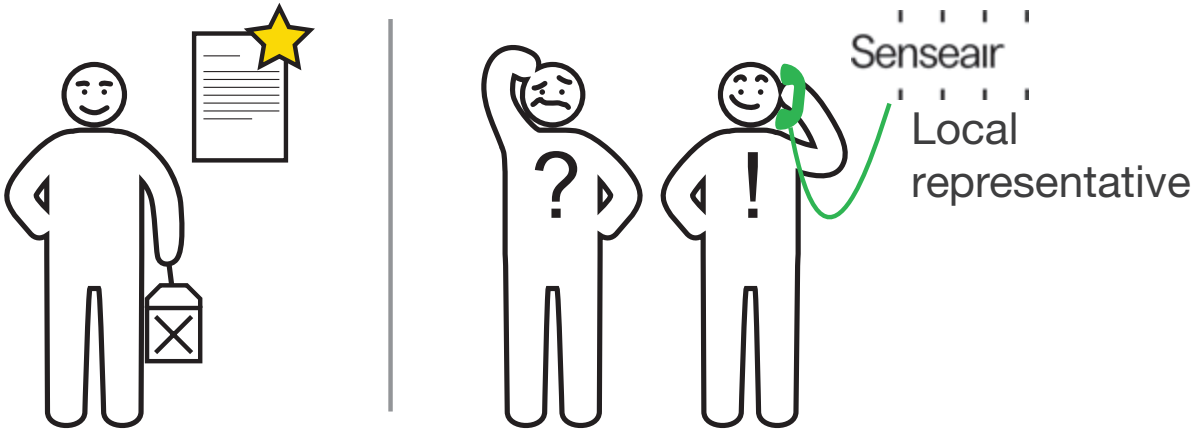

Senseair AB (headquarter)
www.senseair.com

Senseair

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Senseair:

00-0-0108 00-0-0012 00-0-0101