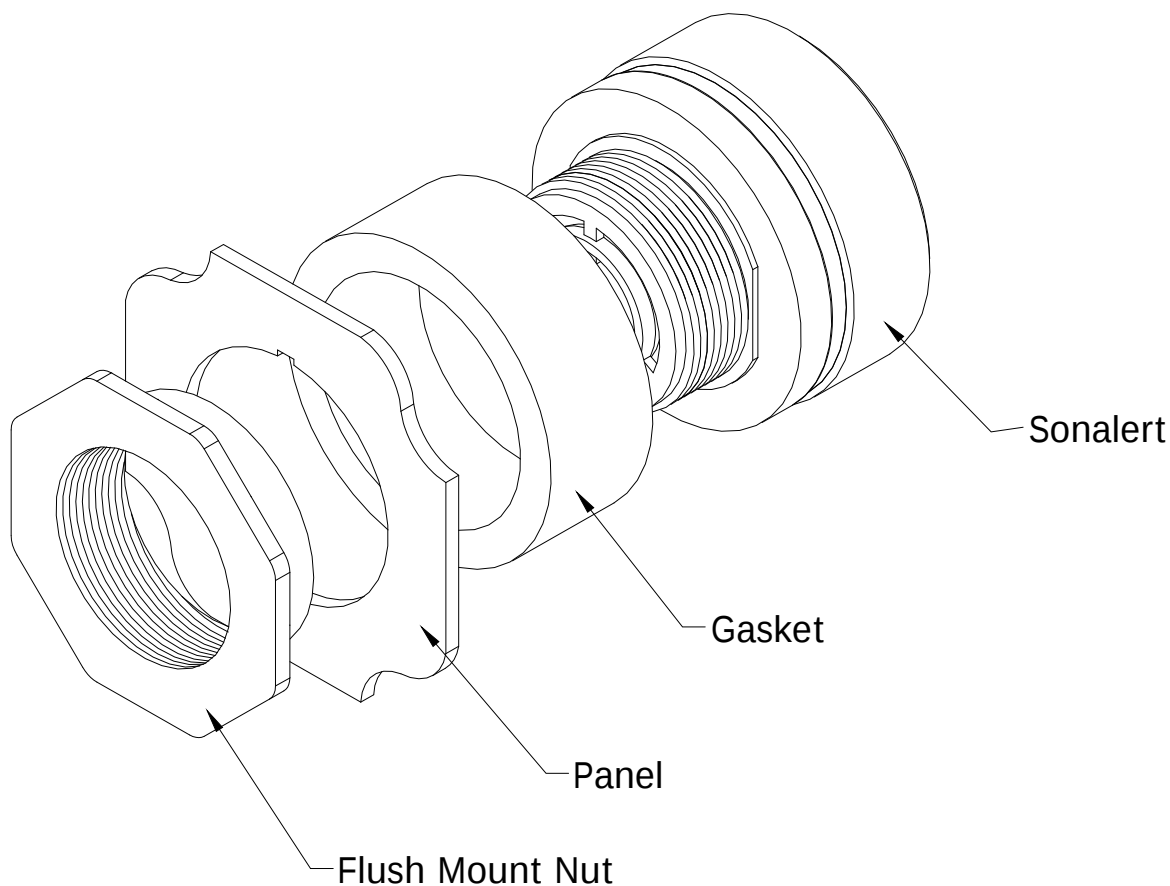


Flush Mount - 16mm

For use with panel hole of 32mm diameter and minimum thickness of 1.5mm.

**Instructions for Assembly:**

1. Place Flush Mount Nut through hole in panel (Nut is keyed).
2. Place Gasket over Flush Mount Nut.
3. Screw Sonalert into assembly and tighten.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Mallory Sonalert:](#)

[SCFM16](#)