

# **User Guide**

M.2 Development Kit (DVK-60-2230C)

Version 1.3



# **REVISION HISTORY**

Version	Date	Notes	Approver
1.0	29 July 2017	Initial Release	Jay White
1.1	31 August 2017	Updated Figure 1 Updated Section 3.3 – Tact Switches	Andrew Chen
		Updated Figure 1 : Development board	
		Updated Table 1: M.2 Key-E socket pins (pin20,21,34,54)	
		Updated Figure 2 : SDIO Golden Finger and Pin Header  Updated section 3.3 Tact Switches  Updated section 3.8 LED Indicator	
1.2	08 October 2018		Jay White
		Update section 3.9 Micro USB port (USB3)	
		Updated model name from DVK-SU60-2230C to DVK-60-2230C	
		Updated template	
1.3	13 Feb 2019	Updated logos and URLs	Sue White



# **C**ONTENTS

1.	Ove	rview	<i>I</i>	. 4						
	1.1	Introduction								
	1.2	Package Contents4								
2.	M.2	Deve	elopment Kit – Main Development Board	. 4						
	1.3	Key	Features	. 5						
	1.4	Und	erstanding the Development Board	. 6						
3.	Fun	ction	al Blocks	. 7						
	1.5	Pin I	Definitions	. 7						
	1.5.	1	M.2 Key-E Socket	. 7						
	1.5.	2	SDIO-Pin Header	. 9						
	1.5.	3	PCIe Golden Finger	10						
	1.6	Pow	er Supply	11						
	1.7	Tact	Switch	12						
	1.7.	1	PCIE_W_DISABLE_N (SW5)	12						
	1.7.	2	PDn (SW6)	12						
	1.7.	3	PMU_EN (SW7)	12						
	1.8	4-wi	ire UART Serial Interface	13						
	1.8.	1	UART Mapping	13						
	1.8.	2	UART Interface Driven by USB	13						
	1.8.	.8.3 UART Interface Driven by External Source								
	1.9	9 32.768 KHz Oscillator								
	1.10	PCM	1	14						
	1.11	LTE	Coexistence	15						
	1.12	LED	Indicator	15						
4.	Add	itiona	al Documentation	16						
5	Ann	endix	Frror! Bookmark not define	d.						

3



#### 1 OVERVIEW

The Laird M.2 development kit provides a platform for rapid wireless connectivity prototyping, providing multiple options for the development of Wi-Fi applications.

This manual is for Rev. 01 of the development PCB and relates to DVK-60-2230C-B0 on the PCB itself. The complete functionality of the development kit hardware requires the use of Laird 50- and 60-series firmware version v xx.xx.xx or greater.

Part number: DVK-60-2230C

Applicable to the following Wi-Fi module part numbers:

60-2230C	Dual-Band 802.11ac Wi-Fi + Bluetooth v4.2 combo module
M2SD50NBT	Dual-Band 802.11ac Wi-Fi + Bluetooth v4.0 combo module
M2US50NBT	Dual-Band 802.11ac Wi-Fi + Bluetooth v4.0 combo module

#### 1.1 Introduction

The Laird M.2 development kit is designed to support the rapid development of applications and software for the 50- and 60-series of Wi-Fi modules featuring Laird's innovative event driven programming language – xxxxxx. More information regarding this product series including a detailed module user guide are available from the 60 Series product page of the Laird website.

## 1.2 Package Contents

Each kit contains the following:

Development board	The development board has the required 60-2230C module installed onto it and exposes all the various hardware interfaces available.				
Power options	<ul> <li>USB cable – Type A to micro B. The cable also provides serial communications via the FTDI USB – RS232 converter chip on the development board</li> <li>DC barrel plug with clips for connection to external power supply</li> </ul>				
IDC cable x?	Supplied to allow simple connection to the ? x ? way pin headers into J20, J21, and J23. The IDC cables are 2.54 mm pitch.				
SDIO extension cable	Supplied to allow a simple connection to the SDIO socket				
Web link card	Provides links to additional information including the 50- and 60-series user guide, schematics, quick start guides, and firmware release notes.				

#### 2 M.2 DEVELOPMENT KIT – MAIN DEVELOPMENT BOARD

This section describes the M.2 development board hardware. The M.2 development board is delivered with the 50- and 60-series modules but no onboard firmware applications.

The M.2 development board is a universal development tool to highlight the capabilities of the 50- and 60-series modules. The development kit is supplied in a default configuration which should be suitable for multiple experimentation options. It also offers a number of pin headers that help to create different configurations for 50- and 60-series modules. This allows you to test different operating scenarios.

The development board allows the 50- and 60-series modules to physically connect to a SDIO host via the supplied SDIO extension cable for development purposes. The development board also provides USB-to-Virtual



COM port conversion through a FTDI chip – part number FT232R. Any Windows PC (XP or later) and Linux PC (Ubuntu xx.xx or Fedora xx.xx) should auto-install the necessary drivers; if your PC cannot locate the drivers, you can download them from http://www.ftdichip.com/Drivers/VCP.htm


# 2.1 Key Features

The M.2 development board has the following features:

- 50- or 60-series module installed on-board
- Power supply options for powering development board from:
  - USB
  - External DC supply
  - SDIO interface
- Regulated 3.3 V for powering the 50- or 60-series modules. Optional regulated 1.8 V for powering the VCCIO for FTDI chip
- USB-to-UART bridge (FTDI chip)
- USB interface for Wifi or BT
- M.2 UART can be interfaced to:
  - USB (PC) using the USB-UART bridge
  - External UART source (using IO break-out connector when development board powered from DC jack or SDIO interface)
- Current measuring options:
  - Pin header (Ammeter)
- IO break-out (2.54 mm pitch headers) connectors interface for plugging-in external modules and accessing all interfaces of the 50- or 60-series modules [UART, LTE coexistence, PCM, GPIO].
- Three buttons and LEDs for user interaction.
- External 32 KHz oscillator for the sleep clock.



# 2.2 Understanding the Development Board

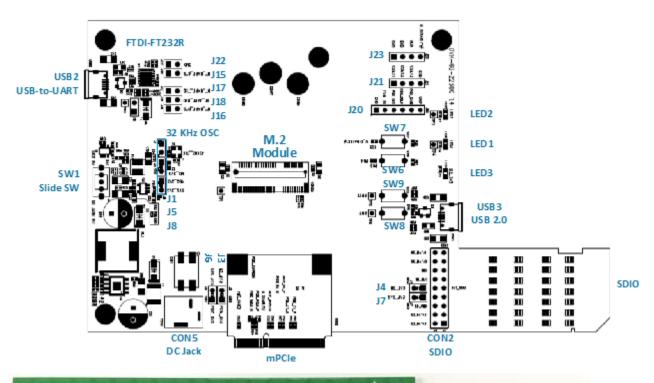

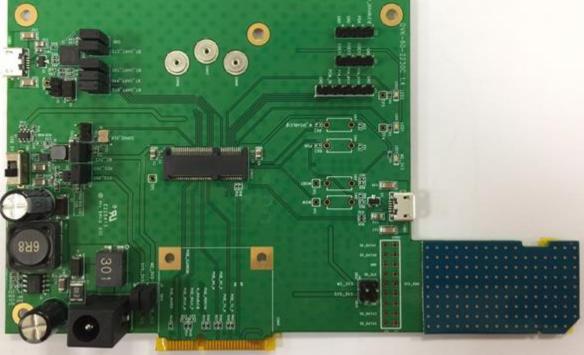


Figure 1: Development board



# 3 FUNCTIONAL BLOCKS

This section covers the major functional blocks that form the development board.

# 3.1 Pin Definitions

# 3.1.1 M.2 Key-E Socket

Table 1: M.2 Key-E socket pins

Tubic 1	. IVI.2 REY-E SUCKET PINS				
Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
1	GND	-	-	Ground	GND
2	3.3V	Power	-	3.3V module power supply	-
3	USB_D+	I/O	3.3V	USB Differential Data-Positive	N/C
4	3.3V	Power	-	3.3V module power supply	-
5	USB_D-	I/O	3.3V	USB Differential Data-Negative	N/C
6	LED1#	O, PU	3.3V	LED indicator for WLAN with 10mA drive capability	N/C
7	GND	-	-	Ground	GND
8	PCM_CLK	I/O	1.8V	PCM Clock Signal (Optimal) Optimal clock used for some codecs. Output if Master mode; Input if Slave mode.	N/C
9	SDIO CLK	I, PU	1.8V	SDIO 4-bit Mode Clock Input	N/C
10	PCM_SYNC	I/O	1.8V	PCM Sync Pulse Signal Output if Master mode; Input if Slave mode.	N/C
11	SDIO CMD	I/O	1.8V	SDIO 4-bit Mode Command/Response	N/C
12	PCM_IN	I.	1.8V	PCM Data	N/C
13	SDIO DATA0	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[0]	N/C
14	PCM_OUT	0	1.8V	PCM Data	N/C
15	SDIO DATA1	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[1]	N/C
16	LED2#	O, PU	3.3V	LED indicator for BT with 10mA drive capability.	N/C
17	SDIO DATA2	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[2]	N/C
18	GND	-	-	Ground	GND
19	SDIO DATA3	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[3]	N/C
20	WOBT	O, PU	3.3V	Wake up on BT	N/C
21	WOW	O, PU	1.8V	Wake up on Wireless Lan	N/C
22	UART TXD	0	1.8V	UART Serial Data Output	N/C
23	SDIO RESET#	N/C	N/C	N/C	N/C
32	UART RXD	l l	1.8V	UART Serial Data Input	N/C
33	GND	-	-	Ground	GND
34	UART RTS	O, PU	1.8V	UART Request-to-Send (Active low)	N/C
35	PERp0	I	1.8V	PCIe Receive Data-Positive	N/C
36	UART CTS	I, PU	1.8V	UART Clear-to-Send (Active low)	N/C
37	PERn0	I	1.8V	PCIe Receive Data-Negative	N/C
38	VENDOR DEFINED38	N/C	N/C	N/C	N/C



Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
39	GND	-	-	Ground	GND
40	VENDOR DEFINED40	N/C	N/C	N/C	N/C
41	РЕТр0	0	1.8V	PCIe Transmit Data-Positive	N/C
42	VENDOR DEFINED42	N/C	N/C	N/C	N/C
43	PETn0	0	1.8V	PCIe Transmit Data-Negative	N/C
44	COEX3	I/O	1.8V	General purpose I/O pin.	N/C
45	GND	-	-	Ground	GND
46	COEX2	O, PD	1.8V	Serial data to external LTE device/	N/C
47	REFCLKp0	I	1.8V	PCIe Differential Clock Input-Positive	N/C
48	COEX1	I, PD	1.8V	Serial data from external LTE device/	N/C
49	REFCLKn0	I	1.8V	PCIe Differential Clock Input-Negative	N/C
50	SUSCLK(32KHz)	I, PU	3.3V	Sleep Clock Input An external sleep clock of 32.768KHz with minimum +/-250ppm is required for power saving mode	-
51	GND	-	-	Ground	GND
52	PERSTO#	I, PD	3.3V	PCIe host indication to reset the device (input) (active low)	N/C
53	CLKREQ0#	I/O	3.3V	PCIe clock request (input/output) (active low)	GND
54	W_DISABLE2#	N/C	N/C	N/C	N/C
55	PEWAKE0#	I/O	3.3V	PCIe wake signal (input/output) (active low)	N/C
56	W_DISABLE1# (O)(0/3.3V)	I, PU	3.3V	PCIe host indication to disable the WLAN function of the device (input) (active low)	N/C
57	GND	-	-	Ground	GND
58	I2C DATA (I/O) (0/3.3V)	N/C	N/C	N/C	N/C
59	RESERVED/PETp1	N/C	N/C	N/C	N/C
60	I2C CLK (O)(0/3.3V)	N/C	N/C	N/C	N/C
61	RESERVED/PETn1	N/C	N/C	N/C	N/C
62	ALERT# (I)(0/3.3V)	N/C	N/C	N/C	N/C
63	GND	-	-	Ground	GND
64	RESERVED	N/C	N/C	N/C	N/C
65	RESERVED/PERp1	N/C	N/C	N/C	N/C
66	UIM_SWP/PERST1#	N/C	N/C	N/C	N/C
67	RESERVED/PERn1	N/C	N/C	N/C	N/C
68	UIM_POWER_SNK/CL KREQ1#	N/C	N/C	N/C	N/C
69	GND	-	-	Ground	GND
70	UIM_POWER_SRC/G PIO1/PEWAKE1#	N/C	N/C	N/C	N/C
71	RESERVED/REFCLKp1	N/C	N/C	N/C	N/C
72	3.3V	Power	-	3.3V module power supply	-



Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
73	RESERVED/REFCLKn1	N/C	N/C	N/C	N/C
74	3.3V	Power	-	3.3V module power supply	-
75	GND	-	-	Ground	GND
76	GND	-	-	Ground	GND
77	GND	-	-	Ground	GND

# 3.1.2 SDIO-Golden Finger and Pin Header

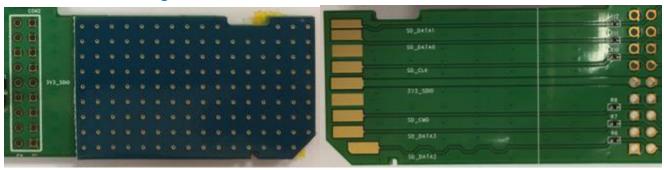


Figure 2: DVK-60-2230C SDIO Golden Finger and Pin Header

Table 2: SDIO pin header

Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
1	GND	-	-	Ground	GND
2	SDIO DATA2	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[2]	N/C
3	GND	-	-	Ground	GND
4	SDIO DATA3	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[3]	N/C
5	GND	-	-	Ground	GND
6	SDIO CMD	I/O	1.8V	SDIO 4-bit Mode Command/Response	N/C
7	GND	-	-	Ground	GND
8	GND	-	-	Ground	GND
9	SDIO_3V3	Power	-	3.3V module power supply	-
10	SDIO_3V3	Power	-	3.3V module power supply	-
11	GND	-	-	Ground	GND
12	SDIO CLK	I, PU	1.8V	SDIO 4-bit Mode Clock Input	N/C
13	GND	-	-	Ground	GND
14	GND	-	-	Ground	GND
15	GND	-	-	Ground	GND
16	SDIO DATA0	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[0]	N/C
17	GND	-	-	Ground	GND
18	SDIO DATA1	I/O, PU	1.8V	SDIO 4-bit Mode DATA line Bit[1]	N/C



# 3.1.3 PCle Golden Finger

Table 3: PCIe aolden fin

Table 3	: PCIe golden finger pins				
Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
1	PEWAKEO#	I/O	3.3V	PCIe wake signal (input/output) (active low)	N/C
2	PCIE_3V3	Power	-	3.3V module power supply	-
3	-	-	-	-	-
4	GND	-	-	Ground	GND
5	-	-	-	-	-
6	-	-	-	-	-
7	CLKREQ0#	I/O	3.3V	PCIe clock request (input/output) (active low)	GND
8	-	-	-	-	-
9	GND	-	-	Ground	GND
10	-	-	-	-	-
11	REFCLKn0	I	1.8V	PCIe Differential Clock input-Negative	N/C
12	-	-	-	-	-
13	REFCLKp0	I	1.8V	PCIe Differential Clock input-Positive	N/C
14	-	-	-	-	-
15	GND	-	-	Ground	GND
16	-	-	-	-	-
17	-	-	-	-	-
18	GND	-	-	Ground	GND
19	-	-	-	-	-
20	W_DISABLE1#	I, PU	3.3V	PCIe host indication to disable the WLAN function of the device (input) (active low)	N/C
21	GND	-	-	Ground	GND
22	PERSTO#	I, PD	3.3V	PCIe host indication to reset the device (input) (active low)	N/C
23	PETn0	0	1.8V	PCIe Transmit Data-Negative	N/C
24	PCIE_3V3	Power	-	3.3V module power supply	-
25	PETp0	0	1.8V	PCIe Transmit Data-Positive	N/C
26	GND	-	-	Ground	GND
27	GND	-	-	Ground	GND
28	-	-	-	-	-
29	GND	-	-	Ground	GND
30	-	-	-	-	-
31	PERn0	I	1.8V	PCIe Receive Data-Negative	N/C
32	-	-	-	-	-
33	PERp0	I	1.8V	PCIe Receive Data-Positive	N/C
34	GND	-	-	Ground	GND
35	GND	-	-	Ground	GND
36	USB_D-	I/O	3.3V	USB Differential Data-Negative	N/C

Americas: +1-800-492-2320 Europe: +44-1628-858-940 Hong Kong: +852 2923 0610



Pin #	Name	Туре	Voltage Ref.	Description	If Not Used
37	GND	-	-	Ground	GND
38	USB_D+	I/O	3.3V	USB Differential Data-Positive	N/C
39	PCIE_3V3	Power	-	3.3V module power supply	-
40	GND	-	-	Ground	GND
41	PCIE_3V3	Power	-	3.3V module power supply	-
42	-	-	-	-	-
43	GND	-	-	Ground	GND
44	LED1#	O, PU	3.3V	LED indicator for WLAN with 10mA drive capability	N/C
45	-	-	-	-	-
46	LED2#	O, PU	3.3V	LED indicator for BT with 10mA drive capability.	N/C
47	-	-	-	-	-
48	-	-	-	-	-
49	-	-	-	-	-
50	GND	-	-	Ground	GND
51	-	-	-	-	-
52	PCIE_3V3	Power	-	3.3V module power supply	-

## 3.2 Power Supply

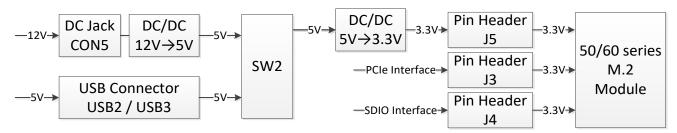


Figure 3: DVK-60-2230C power supply

The development board can be powered from a DC 12-volt supply (into DC jack connector CON5), USB (type micro-B connector, USB2/USB3) or the host interface (PCIe or SDIO interface). The power source fed into DC jack is regulated down to 5 volts with an on-board regulator and wire to SW2.

The 5 volts from the USB or the DC jack is regulated down to 3.3 volts with an on-board regulator on the development board. Switch SW2 selects between the regulated 5 volt and USB. The voltage from host interface (PCIe or SDIO interface) is not regulated but is fed directly to M.2 module supply pin.

Default position of SW2 is to select regulated 5 volts.

The development board has a 1.8-volt regulator for the VCCIO of FTDI-Chip.



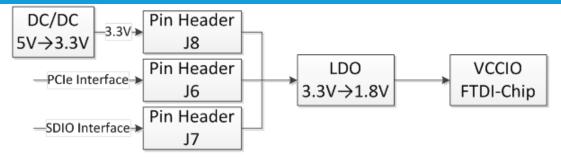


Figure 4: DVK-60-2230C power supply for VCCIO of FTDI chip

On the development board, the power domain:

- M2\_3V3 supplies the M.2 module only.
- The header connectors (J3, J4, J5) can be used to measure the current of power domain M2 3V3.
- REG\_1V8 supplies the FTDI chip IO only.

#### 3.3 Tact Switches

The development board has reserved three tact switches to access the PDn, W\_Disable1#, WOW and WOBT. To view the location, refer to Figure 1.Error! Reference source not found.

#### 3.3.1 PDn (SW6)

Full Power-Down (Input) (Active Low)

0 – Full power-down mode

1 - Normal mode

- PDn can accept an input of 1.8 volts
- PDn may be driven by the host
- PDn must be high for normal operation

An internal pull-up resister on this pin.

#### 3.3.2 W Disable1# (SW7)

PCIe host indication to disable the WLAN function of the device (Input) (Active Low)

0 - Disable the WLAN

1 - Normal mode

- W\_Disable1# can accept an input of 3.3 volts.
- W\_Disable1# may be driven by the host
- W\_Disable1# must be high for normal operation

An internal pull-up resister on this pin.

#### 3.3.3 **WOW (SW8)**

Easily measured the "Wake on Wireless Lan" signal which generate by M.2 module.



#### 3.3.4 **WOBT (SW9)**

Easily measured the "Wake on BT" signal which generate by M.2 module.

Note:W\_DISABLE1# and PDn were also wired out to J23 for testing.

To view its location, refer to Figure 1.

#### 3.4 4-wire UART Serial Interface

The development board provides access to the M.2 module 4-wire UART interface (TX, RX, CTS, RTS) either through USB (via U7 FTDI USB-UART convertor chip) or through a breakout header connector J15, J16, J17 and J18. Refer to Figure 5.

Note: M.2 module provides 4-wire UART interface on the HW.

 $V_{IH}$  is from 1.26V to 2.2V;  $V_{IL}$  is from -0.4V to 0.54V.

#### 3.4.1 UART Mapping

UART connection on the 50 and 60 series modules and FTDI IC are shown in table below. Refer to Figure 5 to see how the 50 and 60 series module UART is mapped to the breakout header connector (J15, J16, J17 and J18).

Table 4: UART mapping

M.2 Default Function	FTDI IC UART
BT_UART_RXD (output)	RXD
BT_UART_TXD (input)	TXD
BT_UART_CTS (output)	CTS
BT_UART_RTS (input)	RTS

#### 3.4.2 UART Interface Driven by USB

- USB Connector The development kit provides a USB Type micro-B connector (USB2) which allows
  connection to any USB host device. The connector optionally supplies power to the development kit and
  the USB signals are connected to a USB to serial convertor device (FT232R).
- **USB-UART** The development kit is fitted with a (U7) FTDI FT232R USB to UART converter which provides USB-to-Virtual COM port on any Windows PC (XP or later). Upon connection, Windows auto-installs the required drivers. For more details and driver downloads, visit <a href="http://www.ftdichip.com/Products/FT232R.htm">http://www.ftdichip.com/Products/FT232R.htm</a>.
- **UART interface driven by USB FTDI chip** In normal operation, the M.2 UART interface is driven by the FTDI FT232R USB to UART converter.

#### 3.4.3 UART Interface Driven by External Source

- UART interface driven by external UART source The M.2 module UART interface (TX, RX, CTS, RTS) is presented at a 2.54 mm (0.1 in.) pitch headers (J15, J16, J17 and J18). To allow the M.2 UART interface to be driven from the breakout header connector (J15, J16, J17 and J18):
  - Development board must be powered from DC jack (CON5) and switch SW1 is in position DC JACK 5V.



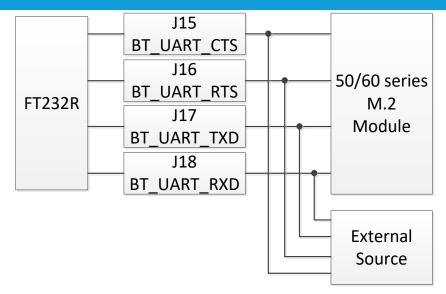


Figure 5: USB to UART Interface and Header to UART interface

#### 3.5 32.768 KHz Oscillator

The development kit is fitted with a (U1) 32.768 KHz oscillator which provides sleep clock to M.2 module. Fit a jumper on J1 to disable the sleep clock, if needed.



Figure 6: Pin header J1

#### 3.6 PCM

The development kit provides the PCM signal on J20.

The pin descriptions of J20 for PCM signal are shown in below table.

Table 5: PCM pins

J20	Description
Pin 1	GND
Pin 2	PCM_IN
Pin 3	PCM_OUT



Pin 4	PCM_BCLK
Pin 5	PCM_SYNC
Pin 6	GNDGND

 $V_{IH}$  is from 1.26V to 2.2V;  $V_{IL}$  is from -0.4V to 0.54V. Note:

#### 3.7 LTE Coexistence

The development kit provides the LTE coexistence signal on J21.

The pin descriptions of J21 for LTE coexistence signal are shown in below table.

Table 6: LTE coexistence pins

J21	Description
Pin 1	COEX1
Pin 2	COEX2
Pin 3	COEX3
Pin 4	GND

Note:  $V_{IH}\,is$  from 1.26V to 2.2V;  $V_{IL}\,is$  from -0.4V to 0.54V.

#### 3.8 LED Indicator

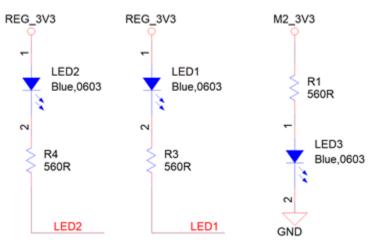


Figure 7: LED indicator

**Table 7: LED descriptions** 

LEDs	Description
LED1	(Active Low)
LED2	(Active Low)
LED3	3.3V module power

15

Hong Kong: +852 2923 0610



# 3.9 Micro USB Port (USB3)

The development board provides access to the M.2 module USB2.0 interface (USB\_D+ and USB\_D-) either through micro USB connector (USB3) or through PCIe golden finger. To view the location, refer to Figure 1.

#### 4 Additional Documentation

Laird offers a variety of documentation and ancillary information to support our customers through the initial evaluation process and ultimately into mass production. Additional documentation includes:

- DVK-60-2230C User Manual
- DVK-60-2230C Schematics
- 50 and 60 series M.2 Module User Manual Hardware Datasheet and Integration Guide

For any additional questions or queries, or to receive local technical support for this Development Kit or for the 50 and 60 series modules, please contact wirelessinfo@lairdtech.com

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Ezurio:

DVK-ST60-2230C