## **SIEMENS**

Data sheet 3RN2013-1GW30



Thermistor motor protection relay Standard evaluation unit 22.5 mm enclosure screw terminal 2 change-over contacts hard gold-plated US = 24 V-240 V AC/DC Manual/Auto/Remote reset with ATEX approval 2 LEDs (READY/TRIPPED) Safe galvanic isolation Test/reset button Wire break monitoring Short circuit monitoring non-volatile

product brand name	SIRIUS
product category	SIRIUS 3RN2 thermistor motor protection
product designation	Thermistor motor protection relay
design of the product	Standard evaluation unit with ATEX approval, open-circuit and short-circuit detection in the sensor circuit, safe disconnection, non-volatile
product type designation	3RN2
General technical data	
product function	thermistor motor protection
display version LED	Yes
power loss [W] for rated value of the current	
<ul> <li>at AC in hot operating state</li> </ul>	1.7 W
<ul> <li>at DC in hot operating state</li> </ul>	1.7 W
insulation voltage for overvoltage category III according to IEC 60664 with degree of pollution 3 rated value	300 V
degree of pollution	3
surge voltage resistance rated value	6 kV
maximum permissible voltage for protective separation	
<ul> <li>between auxiliary and auxiliary circuit</li> </ul>	300 V
<ul> <li>between control and auxiliary circuit</li> </ul>	300 V
shock resistance according to IEC 60068-2-27	11g / 15 ms
vibration resistance according to IEC 60068-2-6	10 55 Hz: 0.35 mm
mechanical service life (operating cycles) typical	10 000 000
electrical endurance (operating cycles) at AC-15 at 230 V typical	100 000
thermal current of the switching element with contacts maximum	5 A
reference code according to IEC 81346-2	K
Substance Prohibitance (Date)	05/28/2009
SVHC substance name	Lead - 7439-92-1 Lead monoxide (lead oxide) - 1317-36-8
Weight	0.22 kg
roduct Function	
product function	
• error memory	Yes
<ul> <li>dynamic open-circuit detection</li> </ul>	Yes
<ul> <li>external reset</li> </ul>	Yes
• auto-RESET	Yes
• manual RESET	Yes
Control circuit/ Control	
type of voltage of the control supply voltage	AC/DC
control supply voltage at AC	
● at 50 Hz rated value	24 240 V

at 60 Hz rated value	24 240 V
control supply voltage at DC rated value	24 240 V
operating range factor control supply voltage rated value at DC	
• initial value	0.85
• full-scale value	1.1
operating range factor control supply voltage rated value at AC at 50 Hz	
• initial value	0.85
• full-scale value	1.1
operating range factor control supply voltage rated value at AC at 60 Hz	
• initial value	0.85
full-scale value	1.1
inrush current peak	
• at 24 V	0.7 A
• at 240 V	12 A
duration of inrush current peak	0.05
• at 24 V	0.25 ms
• at 240 V	0.2 ms
Measuring circuit	40 mg
buffering time in the event of power failure minimum  Precision	40 ms
relative metering precision	2 %
Auxiliary circuit	£ /0
material of switching contacts	AgSnO2 hard gold-plated
number of NC contacts for auxiliary contacts	AgshO2 hard gold-plated
number of NO contacts for auxiliary contacts	0
number of CO contacts for auxiliary contacts	2
operational current of auxiliary contacts at DC-13	
• at 24 V	1A
• at 125 V	0.2 A
• at 250 V	0.1 A
Main circuit	
operating frequency rated value	50 60 Hz
ampacity of the output relay at AC-15 at 250 V at 50/60 Hz	3 A
ampacity of the output relay at DC-13	
• at 24 V	1A
• at 125 V	0.2 A
continuous current of the DIAZED fuse link of the output relay	6 A
Electromagnetic compatibility	
conducted interference	
<ul> <li>due to burst according to IEC 61000-4-4</li> </ul>	2 kV (power ports) / 1 kV (signal ports)
<ul> <li>due to conductor-earth surge according to IEC 61000-4-5</li> </ul>	2 kV (line to ground)
due to conductor-conductor surge according to IEC 61000-4-5	1 kV (line to line)
electrostatic discharge according to IEC 61000-4-2	6 kV contact discharge / 8 kV air discharge
Galvanic isolation	
design of the electrical isolation	Protective separation
galvanic isolation	Vec
between input and output      between the sustainte	Yes
between the outputs     between the voltage supply and other circuits.	Yes
between the voltage supply and other circuits  Safety related data	Yes
failure rate [FIT] at rate of recognizable hazardous failures	6.8E-8 1/h
(λdd) failure rate [FIT] at rate of non-recognizable hazardous failures (λdu)	3.08E-7 1/h
average diagnostic coverage level (DCavg)	18 %
MTBF	97 a
MTTFd	303 a

IEC 62061	
IEC 62061	CII 1
Safety Integrity Level (SIL) according to IEC 62061	SIL 1
PFHD with high demand rate according to IEC 62061	3.76E-7 1/h
ISO 13849	DI a
performance level (PL) according to EN ISO 13849-1	PL c
category according to EN ISO 13849-1	1
performance level (PL) according to ISO 13849-1	PL c
IEC 61508	
Safety Integrity Level (SIL) according to IEC 61508	1
safety device type according to IEC 61508-2	Type B
PFDavg with low demand rate according to IEC 61508	0.0041
Safe failure fraction (SFF)	74 %
hardware fault tolerance according to IEC 61508	0
T1 value for proof test interval or service life according to IEC 61508	3 a
Connections/ Terminals	
product component removable terminal for auxiliary and control circuit	Yes
type of electrical connection	screw terminal
for auxiliary and control circuit	screw-type terminals
type of connectable conductor cross-sections	
• solid	1x (0.5 4.0 mm²), 2x (0.5 2.5 mm²)
<ul> <li>finely stranded with core end processing</li> </ul>	1x (0.5 4 mm²), 2x (0.5 1.5 mm²)
• for AWG cables solid	1x (20 12), 2x (20 14)
connectable conductor cross-section	
• solid	0.5 4 mm²
<ul> <li>finely stranded with core end processing</li> </ul>	0.5 4 mm²
AWG number as coded connectable conductor cross section	
• solid	20 12
stranded	20 12
• stranded	== :=
tightening torque with screw-type terminals	0.6 0.8 N·m
tightening torque with screw-type terminals	
tightening torque with screw-type terminals Installation/ mounting/ dimensions	0.6 0.8 N·m
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position	0.6 0.8 N·m any
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method	0.6 0.8 N·m  any screw and snap-on mounting onto 35 mm DIN rail
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method height	0.6 0.8 N·m  any screw and snap-on mounting onto 35 mm DIN rail 100 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing • with side-by-side mounting	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — backwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — backwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — at the side  • at the side  — downwards  — upwards  — at the side  — downwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — upwards  — at the side  • for grounded parts  — forwards  — backwards  — upwards  — backwards  — upwards  — downwards  — at the side  — downwards  — at the side  — downwards	any screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — upwards  — at the side  • for grounded parts  — forwards  — backwards  — upwards  — backwards  — upwards  — backwards  — upwards  — of orwards  • for live parts  — forwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — of the side — downwards — at the side — downwards — at the side — downwards • for live parts — forwards — backwards	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth required spacing  • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards — at the side — downwards — at the side — downwards — backwards — upwards • for live parts — forwards — backwards — backwards — upwards	any screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — backwards — upwards — backwards — upwards — of orwards — backwards — upwards — at the side — downwards  • for live parts — forwards — backwards — upwards — backwards — upwards — downwards  • for live parts — forwards — backwards — backwards — backwards — backwards — downwards	any screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position  fastening method  height  width  depth  required spacing  • with side-by-side mounting  — forwards  — backwards  — upwards  — downwards  — at the side  • for grounded parts  — forwards  — backwards  — upwards  — backwards  — upwards  — backwards  — upwards  — backwards  — upwards  — at the side  — downwards  • for live parts  — forwards  — backwards  — upwards  — downwards  • for live parts  — forwards  — backwards  — upwards  — backwards  — upwards  — downwards  — backwards  — upwards  — at the side	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth  required spacing  • with side-by-side mounting  — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — backwards — obackwards — backwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards — backwards — upwards — backwards — upwards — backwards — upwards — at the side Ambient conditions	any screw and snap-on mounting onto 35 mm DIN rail  100 mm 22.5 mm 90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth  required spacing  • with side-by-side mounting  — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — backwards — upwards — forwards — backwards — upwards — at the side — downwards — backwards — upwards — at the side — downwards — backwards — upwards — backwards — upwards — backwards — upwards — at the side  Ambient conditions installation altitude at height above sea level maximum	any screw and snap-on mounting onto 35 mm DIN rail  100 mm  22.5 mm  90 mm  0 mm 0 mm 0 mm 0 mm 0 mm 0 m
tightening torque with screw-type terminals  Installation/ mounting/ dimensions  mounting position fastening method height width depth  required spacing  • with side-by-side mounting  — forwards — backwards — upwards — downwards — at the side  • for grounded parts — forwards — backwards — upwards — backwards — obackwards — backwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards — backwards — upwards — backwards — upwards — backwards — upwards — at the side Ambient conditions	any screw and snap-on mounting onto 35 mm DIN rail 100 mm 22.5 mm 90 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm

during storage	-40 +85 °C
during transport	-40 +85 °C
relative humidity during operation maximum	70 %
explosion protection category for dust	[Ex t] [Ex p]
explosion protection category for gas	[Ex e] [Ex d] [Ex px]

Approvals Certificates

## **General Product Approval**







Confirmation





EMV

For use in hazardous locations

**Test Certificates** 

Marine / Shipping







Type Test Certificates/Test Report





Marine / Shipping

other

Environment



Confirmation

Environmental Confirmations

## Further information

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RN2013-1GW30

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RN2013-1GW30

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)


 $\underline{\text{https://support.industry.siemens.com/cs/ww/en/ps/3RN2013-1GW30}}$ 


Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax\_de.aspx?mlfb=3RN2013-1GW30&lang=en

**Characteristic: Derating** 


https://support.industry.siemens.com/cs/ww/en/ps/3RN2013-1GW30/manual

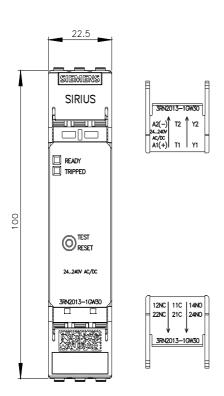

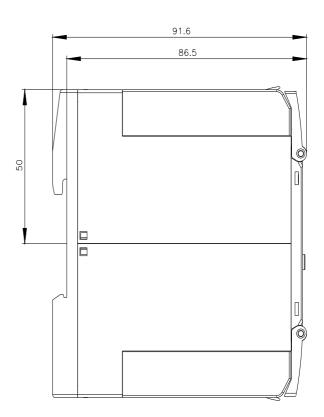

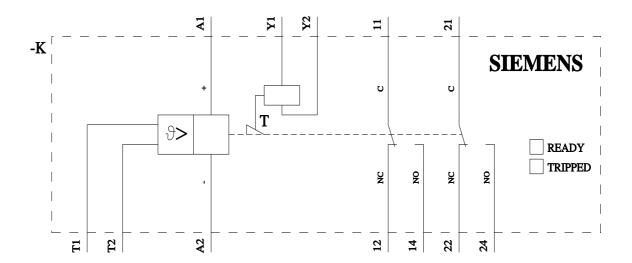

last modified: 12/10/2024 🖸

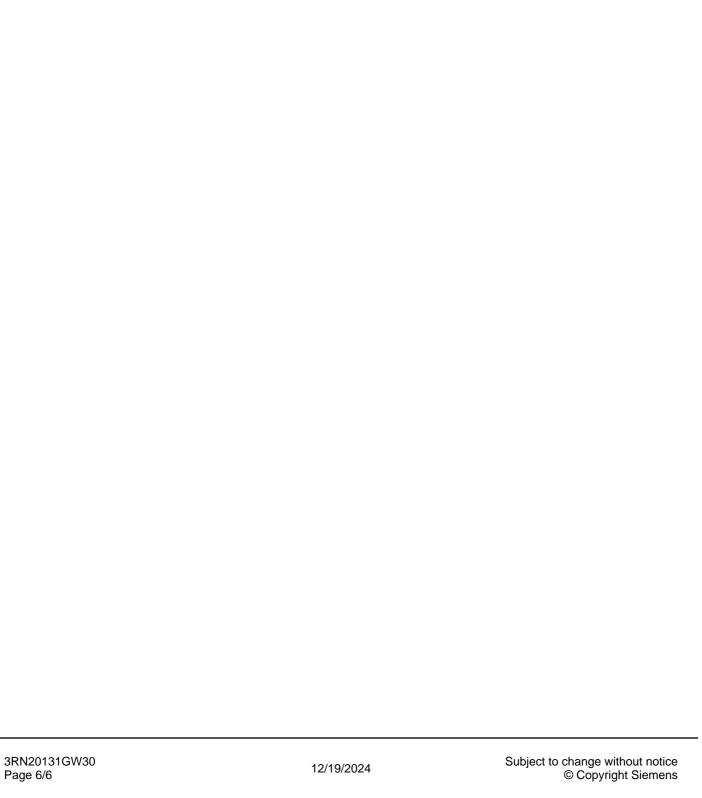

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Siemens:

3RN20131GW30